




VENETIAN GLAZE

for PLASTER-LIKE EFFECTS ON DRYWALL
or COLOR SHIFTING ON BRICK OR STONE



Venetian Glaze in Custom Color

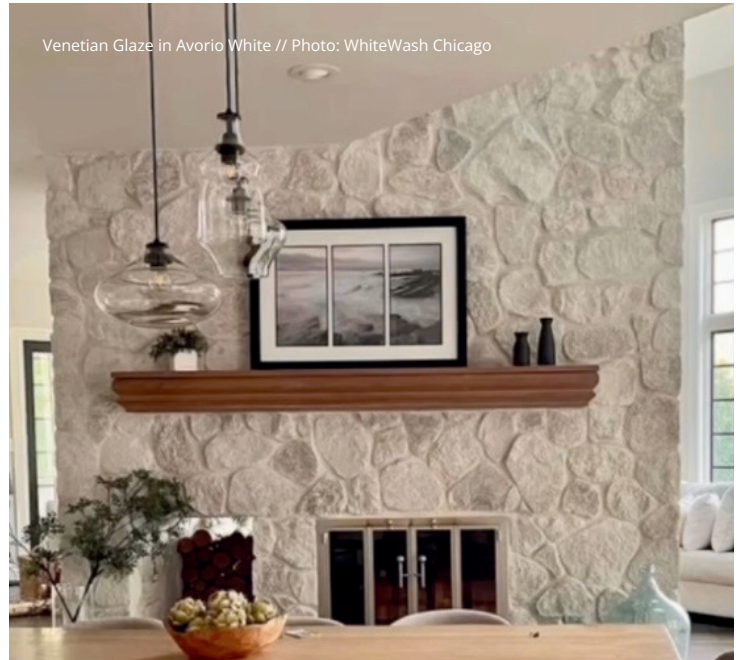

Venetian Glaze in Avorio White // Photo: WhiteWash Chicago

PRODUCT FEATURES

- Authentic, Italian slaked lime paint
- One product, two amazing effects
- Plaster-like effects when troweled on Interior drywall
- Semi-transparent, color shifting effects on absorbent masonry
- Myriad color possibilities
- No odor, Zero-VOC, and environmentally friendly

“Venetian Glaze provides our team with an immense amount of artistic flexibility. We love working with Romabio products. Their beauty and durability allow us to turn homes and walls into art for our customers.”

~ Simon Streak, Owner, Struttura US



VENETIAN GLAZE

for PLASTER-LIKE EFFECTS ON DRYWALL
or COLOR SHIFTING ON BRICK OR STONE

COLOR PROFILE & BASE TYPE

- Neutral base that can be custom tinted to light and dark colors
- When color shifting brick or stone, paint will dry lighter and more opaque than when wet

SIZES AVAILABLE

- **1L SKU:** VGZ-UNTINT-NB-1L
- **2.5L SKU:** VGZ-UNTINT-NB-2.5L
- **15L SKU:** VGZ-UNTINT-NB-15L

COVERAGE*

INTERIOR DRYWALL : Undiluted

- **1L** – Approx. 40 – 100 sq/ft
- **2.5L** – Approx. 100 – 250 sq/ft
- **15L** – Approx. 600 – 1500 sq/ft

INT/EXT BRICK OR MASONRY: Diluted to 200%

- **1L** – Approx. 160 – 260 sq/ft
- **2.5L** – Approx. 400 – 650 sq/ft
- **15L** – Approx. 2400 – 3900 sq/ft

**Actual coverage is heavily dependent upon application type, surface texture, dilution, and absorption. It is recommended to test product on actual surface to determine the exact consumption.*

RECOMMENDED DILUTION**

	1L/1QT	2.5L/0.67GAL	15L/4GAL
100%	1L	2.5L	15L
200%	2L	5L	30L
300%	3L	7.5L	45L

****Only for Color Shifting Brick or Stone**

APPLICATION ON INTERIOR DRYWALL

- 1 Apply Romabio MicroGrip Primer, let dry overnight and then sand lightly until smooth
- 2 Mix product thoroughly before use
- 3 Apply 1st and 2nd coats undiluted with a trowel

APPLICATION ON BRICK OR STONE

- 1 Dilute with clean water 100%-300%
- 2 Mix thoroughly before and during use
- 3 Apply 1 coat with a Romabio Masonry Brush

HELPFUL TIPS FOR APPLYING ON DRYWALL

- Start with Romabio MicroGrip Primer then sand until smooth and uniform
- Work in small sections to keep a wet edge and allow more movement
- Protect your finish with Romabio Decorative Topcoat Flat

HELPFUL TIPS FOR APPLYING ON DRYWALL

- Before applying, test with water to be sure surface is absorbent. Surface **MUST** absorb water, not bead up, for semi-transparent effects
- For a natural look when color shifting, start with 300% dilution and add more product if more coverage is needed
- Remove promptly with water and sponge or brush if coverage is more opaque than desired

TOOLS



Scan to
Learn More